


ecogise Medium Pressure Valve Diagram

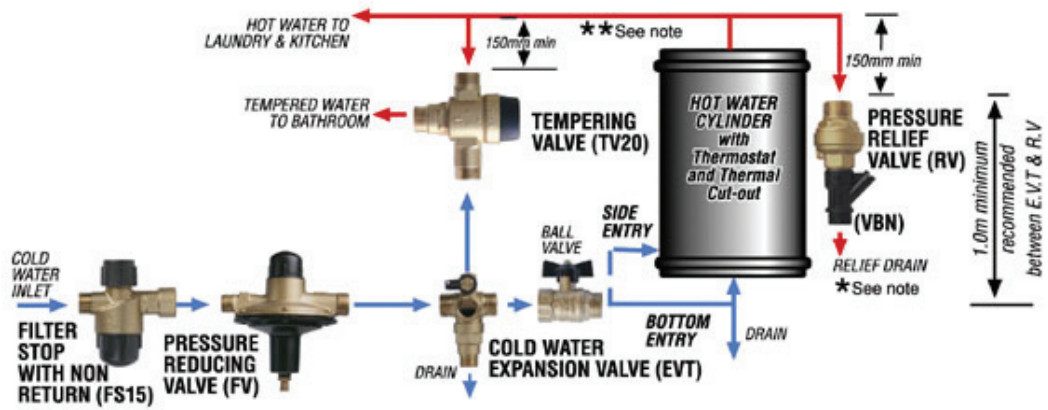

Notes:

* If the drain exceeds a factor of 12 as a combination of length in meters and number of bends (e.g. 7 metres & 5 bends) we recommend the installation of an SVB vacuum break.

** 1.0m minimum copper pipe length from cylinder to Tempering Valve